

Whole Room Dryer 10290MG-GB

USER MANUAL



INTRODUCTION

The user manual tells you how to operate the WRD-5000. Please read thoroughly before operating the unit. If you have any questions please contact our Customer Service Department at the address shown at the back of this section or phone 01388 602751

IMPORTANT

Your WRD-5000 is packed in a plastic wrapping – please ensure that it is disposed of safely and where it will not be a danger to small children.

UNPACKING

Carefully remove the unit from its transit box and wrapping, and visually check for any signs of transit damage. If there are any signs of damage DO NOT attempt to operate the unit, call your supplier for advice. Retain the packaging for further use, or dispose of it considerately

OPERATION

The WRD-5000 should only be operated in the horizontal position and with the unit standing on a firm, level floor. The WRD-5000 is designed to blow large quantities of air across wet surfaces to speed up the drying process. The WRD-5000 should be positioned in the centre of the area to be dried. Connect the power cord to a suitable supply and the unit is ready for operation.

SWITCHING ON

The WRD-5000 ON/OFF switch is located on the side of the unit. To start the fan, set the switch to the ON position (I). Since the WRD-5000 has a considerably high suction, always ensure that the inlet grille is kept free of any obstruction during operation.

SWITCHING OFF

Set the ON/OFF switch to the OFF position (0). Turn off the power and disconnect. Do not use the supply cord to adjust or move the unit. Use the handle provided.
The unit is fitted with rubber feet to allow it to be stored in the vertical position.

ELECTRICAL CONNECTIONS

The wires in the mains lead are coloured in accordance with the following code:

GREEN & YELLOW.....EARTH
BLUE.....NEUTRAL
BROWN.....LIVE

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your own plug, proceed as follows.

The wire which is coloured Green and Yellow must be connected to the terminal marked E or by the Earth Symbol or coloured Green or Green and Yellow. The wire which is coloured Blue must be connected to the terminal in the plug marked with the letter N or is coloured Black. The wire which is coloured Brown must be connected to the terminal which is marked with the letter L or is coloured Red.

You must safely dispose of the non rewirable plug once it has been removed from the flexible cord. It is dangerous to attempt to inset the plug into any electrical socket.

If the supply cord is damaged it must be replaced by qualified Ebac personnel or other similar qualified persons in order to avoid hazard.

CHANGING THE FUSE

Only 13 amp fuses that are ASTA approved to BS1362 should be used.

NON REWIREABLE PLUGS

The fuse cover must be refitted after replacement of the fuse.

SERVICE

Always turn off the power and unplug the unit before removing any guards.

This machine should be serviced by qualified Ebac personnel or other persons having technical competence in servicing electrical equipment following the instructions in the Ebac Service Manual.

WARNING – THIS APPLIANCE MUST BE EARTHED

SPECIFICATIONS

Model	WRD-5000
Part Number	10290MG-GB
Height	300 mm
Width	660 mm
Depth	660 mm
Weight	18Kg
Power	280W
Voltage	230 V
Airflow	5000M ³ /h
Fan Speed	1360rpm
Fan Blade Diameter	420mm
Noise Level	<70dbA
IP Rating	IP22

SAFETY PRECAUTIONS

WARNING- THIS FAN IS NOT FLAMEPROOF

- ◆ **DO NOT** ALLOW CHILDREN TO PLAY WITH OR AROUND THE UNIT. ENSURE THE UNIT IS INACCESSIBLE TO CHILDREN WHEN NOT ATTENDED.
- ◆ **DO NOT** USE THIS UNIT IN AN ENVIRONMENT CONTAINING FLAMMABLE FUMES
- ◆ **DO NOT** USE THIS UNIT IF THE CABINET OR POWER CORD IS DAMAGED
- ◆ **DO NOT** INSERT OBJECTS INTO ANY OF THE GRILLES ON THE MACHINE
- ◆ **DO NOT** COVER OR OBSTRUCT AIRFLOW FROM THE GRILLES
- ◆ **DO NOT** OPERATE THE UNIT WITH THE COVERS REMOVED
- ◆ **DO NOT** ATTEMPT ANY REPAIRS SHOULD THE UNIT FAIL TO OPERATE
- ◆ **DO NOT** STAND ON THE UNIT
- ◆ **DO NOT** LIFT THE UNIT WHEN SWITCHED ON
- ◆ **DO** CHECK THE PLUG ON THE EQUIPMENT MATCHES THE SUPPLY
- ◆ **DO** USE THE UNIT FOR THE PURPOSE FOR WHICH IT WAS DESIGNED
- ◆ **DO** ENSURE THE POWER CORD AND SUPPLY IS EARTHED CORRECTLY
- ◆ **DO** USE A RESIDUAL CURRENT DEVICE "RCD" WHERE POSSIBLE
- ◆ **DO** KEEP THE UNIT DRY. NEVER USE A HOSE OR PRESSURE WASHER TO CLEAN THE UNIT.
- ◆ This appliance can be used by children from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the application in a safe way and understand the hazards involved.
- ◆ Cleaning and user maintenance shall not be made by children without supervision.



UK Head Office

Ebac Industrial Products Ltd
St Helens Trading Estate
Bishop Auckland
County Durham
DL14 9AD

Tel: +44 (0) 1388 664400
Fax: +44 (0) 1388 662590

www.eipl.co.uk
sales@eipl.co.uk

American Sales Office

Ebac Industrial Products Inc
700 Thimble Shoals Blvd.
Suite 109, Newport News
Virginia, 23606-2575
USA

Tel: +01 757 873 6800
Fax: +01 757 873 3632

www.ebacusa.com
sales@ebacusa.com

German Sales Office

Ebac Industrial Products Ltd.
Gartenfelder Str. 29-37
Gebäude 35
D-13599, Berlin
Germany

Tel: +49 3043 557241
Fax: +49 3043 557240

www.eip-ltd.de
sales@eip-ltd.de